

Fully 8 RC

Thank you for choosing a Meliconi remote control.

Keep this booklet for future reference.

The **FULLY 8 RC** universal remote control is ideal for replacing up to 8 remote controls of any brand for TV, Digital Terrestrial (TER), Satellite (SAT) Decoders, DVD players (including Blu Ray), Videotape recorders (VCR), Personal video recorders (PVR), cable TV (CAB), other audio video equipment (AUX) or decoders for ADSL TV (ADSL). The remote control has a non-volatile memory, meaning that it does not lose its settings even if there are no batteries in it.

IMPORTANT: the device must not be exposed to excessive heat sources.

USE OF THE BUTTONS AND FUNCTIONS

The functions of the buttons described below are available only if they are also present on the original remote control.

Buttons for selecting the device to be controlled.

Numeric keypad

Selects digital TV and radio

Volume control +/-

For moving around within the **MENU**

Specific buttons for decoder

TELETEXT buttons

ON/OFF switches the device OFF and in some cases ON

Displays the list of programmes

For selecting an external input source

Selects analogue/digital

For selecting the next programme **P+** or the previous programme **P-**


MUTE turns sound OFF and ON

Confirm selection

Fastest functions or for selecting sub-menus using colours

DVD/PVR RECORD PAUSE STOP PLAY buttons

DVD and PVR forward/back functions

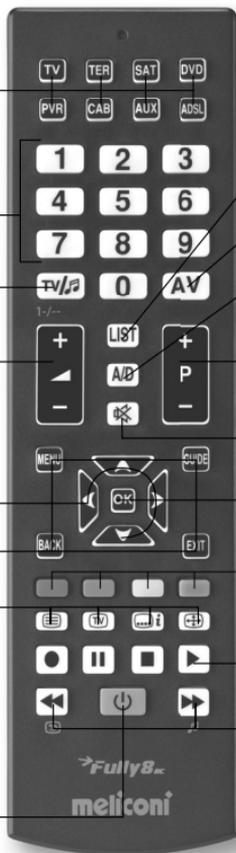

INSERTING THE BATTERIES

The remote control requires 2 new 1.5V alkaline **AAA/LR03** batteries. Insert them as illustrated.

Try pressing a number button and check that the red light remains lit continuously until you release the button: if the light flashes, the batteries inserted are not charged and are about to go flat, therefore you must substitute them.



Do not leave flat batteries inserted, as liquid may leak and damage the remote control

SETTING CODES

The **Fully 8 RC** remote control is a universal remote, so its memory contains data relating to numerous devices of various brands available on the market.

Each original device has a **specific code** which must be used to set up the remote control.

Therefore, to use your **Fully 8 RC** you **must** enter the specific code for each device you wish to control.

So use one of the following methods to identify the correct code and set it in your remote control:

- A) - INTERNET (recommended)
- B) - CELL PHONE (SMS)
- C) - MANUAL SEARCH

A

SETTING CODES USING INTERNET

If you have an Internet connection available, follow the on-line guide on the www.meliconi.com/guida website to identify the specific codes for the devices you wish to command. Then set the codes manually in your **MELICONI** remote control as described in the **ENTERING THE CODE DIRECTLY** procedure.

B

SETTING CODES USING A CELL PHONE

Today, Meliconi gives customers who don't have internet the chance to receive the codes for programming their remote control directly on their cell phone.

Simply send an **SMS** to this number **0039 345 7518893** as follows: **8A, Type, Brand, Model**

- Type = indicate the device to be controlled using one of the following abbreviations: **TV - SAT - DVD - VCR - TER** (Digital Terrestrial decoder) - **AUX** (other audio video device).
- Brand, Model = to indicate the brand and the model of the device to be controlled.

Example: 8A, TV, PHILIPS, 32PFL3614 (if you don't know the model, don't write anything after the brand).

Once you have received the SMS with the list of codes, set the first code in the remote control as described in the **ENTERING THE CODE DIRECTLY** section.

Stand in front of the device with the MELICONI remote control. Turn the device on and then press the **OFF** button on the remote (or the **PLAY** button if the device is a **VCR/DVD**).

If the device does **NOT** switch off (or if the **VCR/DVD** does not start playing), try setting the consecutive code in the **SMS** list in the remote control.

When the device reacts check whether the other buttons are operating correctly too.

If they do, the remote control is ready to use.

If they don't, **you are probably using an incorrect code destined for a very similar device**; at this point **ignore** the SMS list and consult the **SETTING CODES USING A MANUAL CODE** section to find a more suitable code.

NOTE: If you don't receive an SMS on your cell phone or if the message says **ERROR / NO CODE**, it means the system has not been able to process the data you have sent; **Do not try sending another SMS** use the **MANUAL SEARCH** instead.

C

SETTING CODES USING A MANUAL SEARCH

(only to be performed if the specific code **could not be found**)

1. Switch on the device to be programmed: if **TV, SAT, TER** select a programme - if **DVD** insert a DVD, for videotape recorders insert a cassette
 2. Hold down the selection button corresponding to the device whose code you want to find (e.g.: **TV**) until the indicator light starts to flash.
 3. Now release the button and briefly press the button  or  for a **DVD, VCR** and **PVR**.
 4. The indicator light flashes faster; the remote control is ready for the search.
 5. Point the remote control at the device. Slowly press and release the  or  button several times, stopping when the device responds correctly to the command sent (you may need to press the button several dozen times).
 6. When the device responds correctly, press the **OK** button. Three long flashes indicate that the operation was completed correctly.
- Check** that the other buttons correspond to the functions of the original remote control; if not, it is likely that the code found is incorrect, but is used for a very similar device. In that case, repeat the procedure from point 2.

If the manual search for the code is successful, obtain the code in use by following the **DISPLAY CODE IN USE** procedure and make a note of it inside the battery cover.

NOTE: During the search the indicator stops flashing and the remote control exits the programming mode in the following cases:

- if for 12 seconds the button indicated is not pressed or if another button is pressed
- if the list of codes to find is terminated. If this happens, go to the www.meliconi.com website

ENTERING THE CODE DIRECTLY

(only to be performed if you know the specific code to be set)


1. Hold down the selection button corresponding to the device whose code you want to enter (e.g.: **TV**) until the indicator light starts to flash.
2. When the indicator light starts flashing, release the button and immediately enter the specific code previously found (e.g.: **1306**).

Three long flashes indicate a correct setting. If they do not appear, repeat the procedure.

DISPLAY CODE IN USE

If you set up the remote control using the **MANUAL SEARCH** procedure, obtain and make a note of the code in use as follows:

1. Hold down the selection button corresponding to the device whose code you want to find (e.g.: **TV**) until the indicator light starts to flash.
2. When the indicator light starts flashing, release the button and briefly press the **TV/P** button.
3. After a pause of several seconds, the indicator light produces four sets of flashes, spaced out, corresponding to the code to be obtained. Count the number of flashes. Each set of flashes corresponds to one figure in the code. Ten flashes correspond to the figure 0.

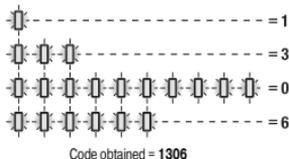

4. Make a note of the code obtained on the label on the inside of the battery cover. You may need it in future.

TROUBLESHOOTING

PROBLEM

The device does not respond and the indicator light does not come on when a button is pressed.

The device does not respond but the indicator light comes on.

When you press a button the indicator light flashes and the device does not respond to commands.

The remote control does not execute all commands correctly.

SOLUTION

Make sure that the batteries are inserted correctly, or substitute them with 2 new 1.5V alkaline AAA/LR03 batteries.

Make sure that the batteries are new and that the remote control is pointing at the device without any obstacles between them.

If necessary, enter the remote control code again by repeating the programming procedure.

Substitute the batteries, which are about to go flat.

You may be using an incorrect code. Enter the remote control settings again by repeating the programming procedure.

INFO-LINE

If you have any questions about the new **Fully 8 RC** remote control:

- carefully read this Instructions Booklet which will allow you to solve most problems.
- consult our website www.meliconi.com where you will find the answers you need in the fastest, easiest way.

2 year WARRANTY

The warranty is voided if the product is tampered with or used improperly.

Retailer stamp

Remote control model: **Fully 8 RC**

Purchase date / /



The symbol showing a wheeeline bin with a cross through it which appears on the device indicates that at the end of its useful life the product must be collected separately from other waste. Therefore, at the end of the device's life, you must take it to appropriate centres for the differentiated collection of electrical and electronic waste, or return it to the retailer when purchasing a new device of equivalent type, on a one-for-one basis. Suitable differentiated collection to allow subsequent recycling of the decommissioned device, with environmentally-compatible treatment and disposal, help to prevent any negative effects on the environment and health and to promote the recycling of the materials of which the device is made.