

GumBody®

Senior2

Thank you for choosing a Meliconi remote control.

Keep this booklet for future reference.

The **Gumbody Senior 2** remote control is ideal for simultaneously controlling an analogue TV combined with a digital decoder (terrestrial, satellite or cable) connected to it.

In this case, thanks to its combined keypad, there is no need to manually select the device to be controlled. Using SENIOR 2 to control both devices (TV + DECODER), the **light blue** buttons automatically control the TV, and the **dark blue** buttons control the DECODER.

With the appropriate settings the remote control can also control individual devices such as a digital TV, analogue TV or decoder. In that case, all of the buttons on the keypad control the selected device.


The remote control has a non-volatile memory, meaning that it does not lose its settings even if there are no batteries in it.

Its ergonomic shape and soft rubber body make it easy to grip and protect the remote control if it is knocked and dropped.

IMPORTANT: the device must not be exposed to excessive heat sources.

USING THE REMOTE CONTROL

The functions of the buttons described below are available only if they are also present on the original remote control.

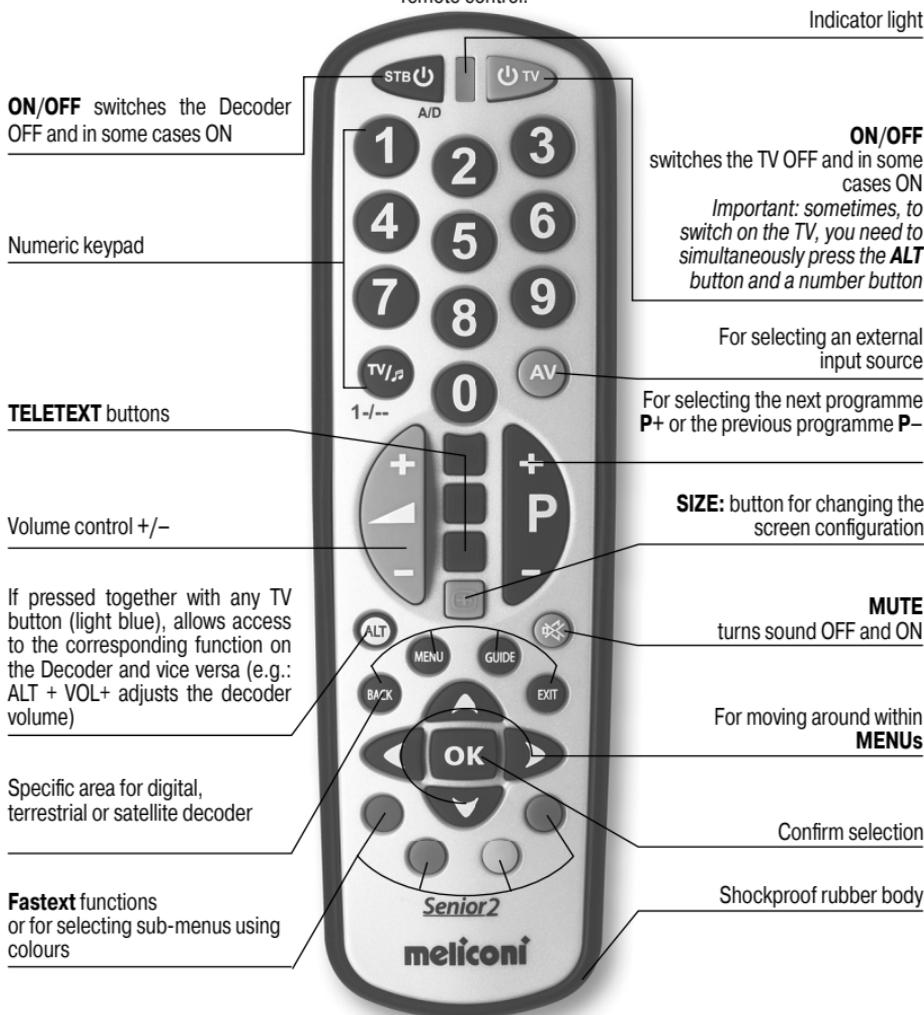

INSERTING THE BATTERIES

The remote control requires 2 new 1.5V alkaline **AAA/LR03** batteries.

Insert them as illustrated.

Try pressing a number button and check that the red light remains lit continuously until you release the button: if the light flashes, the batteries inserted are not charged and are about to go flat, therefore you must substitute them.



FINDING THE CODE

The SENIOR 2 remote control is a universal remote, its memory containing data relating to many devices of different brands available on the market. Each original device has a specific code which must be used to set up the remote control.

Therefore, to use SENIOR 2 you **must** enter the specific code for each device you want to control.

If you have an internet connection, follow the online guide on the www.meliconi.com/guida website to find the specific codes for the devices you want to control; then set the codes in the SENIOR 2 remote control as described in the **ENTERING THE CODE DIRECTLY** procedure.


If you are unable to find a specific code, consult the section on **MANUAL CODE SEARCH**.

ENTERING THE CODE DIRECTLY

To go to the programming mode, according to requirements, use one of the following pairs of buttons:

- VOL +** and **VOL -** to set the code for the TV part only - (light blue buttons)
- P +** and **P -** to set the code for the DECODER part only - (dark blue buttons)
- VOL +** and **P +** to set a single code and control only one device - (whole keypad)

1. Switch to the programming mode by simultaneously holding down the appropriate pair of buttons.
2. When the indicator light starts flashing, release the buttons and immediately enter the specific code previously found. (e.g.: 1306)

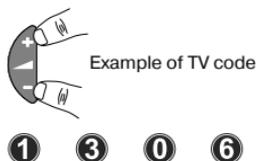

Three long flashes indicate a correct setting. If they do not appear, repeat the procedure.

MANUAL CODE SEARCH

(only to be performed if the specific code could not be found)

If you want to use the SENIOR 2 to simultaneously control two different devices (TV + DECODER) follow procedure **A** then procedure **B**.


To control a single device (DECODER), follow only procedure **B**.

To control a single device (DIGITAL/ANALOGUE TV), follow procedure **C**.

If the manual search for the code is successful, obtain the code in use by following the **DISPLAY CODE IN USE** procedure and make a note of it inside the battery cover.

A. MANUAL SEARCH (TV)

1. Switch on the TV and select a programme
2. Simultaneously hold down the VOL + and VOL - buttons.
3. When the indicator light starts flashing, release the buttons and briefly press the TV ON/OFF button.
4. The indicator light flashes faster; the remote control is ready for the search.
5. Point the remote control at the TV. Slowly press and release the TV ON/OFF button several times, stopping when the TV is switched off (you may need to press the button several dozen times).
6. When the device has switched off press the **OK** button. Three long flashes indicate that the operation was completed correctly.

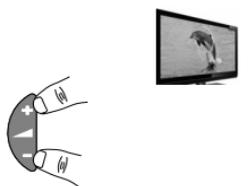

Check that the other buttons (light blue) correspond to the functions of the original remote control; if not, it is likely that the code found is incorrect, but is used for a very similar device, therefore repeat the procedure from point 2

B. MANUAL SEARCH (DECODER)

1. Switch on the device and select a programme.
2. Simultaneously hold down the P+ and P- buttons.
3. When the indicator light starts flashing, release the buttons and briefly press the STB ON/OFF button.
4. The indicator light flashes faster; the remote control is ready for the search.
5. Point the remote control at the device. Slowly press and release the STB ON/OFF button several times, stopping when the decoder is switched off (you may need to press the button several dozen times).
6. When the device has switched off press the **OK** button. Three long flashes indicate that the operation was completed correctly.



Check that the other buttons (dark blue) correspond to the functions of the original remote control; if not, it is likely that the code found is incorrect, but is used for a very similar device, therefore repeat the procedure from point 2.

INTERNET UPDATE

Thanks to a new Meliconi technology, from today you can download from the internet directly to your remote control the codes of the latest devices or those which will be brought out in future, codes which would not otherwise be available using traditional programming methods. You need to purchase a special cable, the MELICONI Audiocable, which allows the downloading of useful information by any PC with an internet connection, by going to the website www.meliconi.it/guida and following the on-screen instructions.

TROUBLESHOOTING

PROBLEM

The device does not respond and the indicator light does not come on when a button is pressed

The device does not respond but the indicator light comes on.

When you press a button the indicator light flashes and the device does not respond to commands.

The remote control does not execute all commands correctly.

SOLUTION

Make sure that the batteries are inserted correctly, or substitute them with 2 new 1.5V alkaline AAA/LR03 batteries.

Make sure that the batteries are new and that the remote control is pointing at the device without any obstacles between them.

If necessary, enter the remote control code again by repeating the programming procedure.

Substitute the batteries, which are about to go flat.

You may be using the wrong code. Enter the remote control settings again by repeating the programming procedure.

INFO-LINE

If you have any questions about the new SENIOR 2 remote control:

- carefully read this Instructions Booklet which will allow you to solve most problems
- consult our website www.meliconi.com where you will find the answers you need in the fastest, easiest way.

2 year WARRANTY

The warranty is voided if the product is tampered with or used improperly.

Remote control model
GUMBODY SENIOR 2

Purchase date / /

Retailer stamp



The symbol showing a wheeled bin with a cross through it which appears on the device indicates that at the end of its useful life the product must be collected separately from other waste. Therefore, at the end of the device's life, you must take it to appropriate centres for the differentiated collection of electrical and electronic waste, or return it to the retailer when purchasing a new device of equivalent type, on a one-for-one basis. Suitable differentiated collection to allow subsequent recycling of the decommissioned device, with environmentally-compatible treatment and disposal, help to prevent any negative effects on the environment and health and to promote the recycling of the materials of which the device is made.