

Thank you for choosing MELICONI.

This universal remote control has the essential functions for the simplified use of an analogue or a digital television combined with a satellite or terrestrial decoder - without having to switch between one appliance and another. The dark blue buttons transmit the commands to the decoder while the light blue buttons control the functions that correspond to the TV. If used with a digital TV, all the buttons control the same appliance.

Keep your Instructions Booklet for future reference.

BUTTON AND FUNCTION USE

To select the next programme.

Indicator light.

Interrupts and restores the TV audio.

To reduce the TV's audio volume.

Numeric keypad.

Button to exit the Teletext and return to normal viewing.

OFF to turn the decoder off (STB).

TV ON button which is occasionally needed to turn the TV on

To increase the TV's audio volume.

To select the previous programme.

To select an external input terminal to the TV.

Button to access the Teletext.

ON/OFF to turn OFF the TV and in some cases to turn it ON.

FITTING THE BATTERIES

Before programming and using the remote control, fit the batteries.

The remote control requires 2 new 1.5 V AAA/LR03 alkaline batteries. Insert the batteries as shown:

- The batteries must be changed once a year.
- Replace the batteries if the indicator light on the remote control starts to flash during use. The batteries are low.
- This remote control has a permanent memory and does not lose the programmed codes when the batteries are removed.
- Make a note of the code for your appliances on the adhesive label found inside the battery cover. This note will be handy if you have to reprogram your remote control.



Warning: do not expose the remote control to sources of excessive heat

PREPARE FOR USE

Read these instructions carefully before programming your remote control!

To command your appliances, you must programme your **Speedy 2 COMBO** as described in the next paragraph. For those who can connect to the internet website www.meliconi.com, you will find interactive instructions for a faster and easier programming of your remote control.

HOW TO PROGRAMME THE REMOTE CONTROL

If you have an analogue TV and an external decoder, follow procedure A and then procedure B. Follow procedure C if you have a digital TV.

A

ANALOGUE TV PROGRAMMING

- Turn on the TV and select a programme.
- Simultaneously hold down the **+** and **-** buttons for 5 seconds until the upper indicator light starts to flash indicating that the remote control is in the programming state.
- Release the buttons and enter the code **0001** within 12 seconds. The indicator light begins flashing more quickly, indicating that the remote control is ready for the search.
- Point the remote control towards the TV. Press and slowly release the **U** button several times, stopping when the appliance goes off (you may need to press the **U** button a few dozen times).
- When the appliance goes off, press the **AV** button to confirm. **Three long flashes** indicate that the operation has been completed successfully.

B

DECODER PROGRAMMING

- Turn on the appliance and select a programme.
- Simultaneously hold down the **+** and **-** buttons for 5 seconds until the upper indicator light starts to flash indicating that the remote control is in the programming state.
- Release the buttons and enter the code **0001** within 12 seconds. The indicator light begins flashing more quickly, indicating that the remote control is ready for the search.
- Point the remote control towards the appliance. Press and slowly release the **U** button several times, stopping when the appliance goes off (you may need to press the **U** button a few dozen times).
- When the appliance goes off, press the **AV** button to confirm. **Three long flashes** indicate that the operation has been completed successfully.

C

DIGITAL TV PROGRAMMING

- Turn on the TV and select a programme.
- Turn on the TV and select a programme **+** and **-** buttons for 5 seconds until the upper indicator light starts to flash indicating that the remote control is in the programming state.
- buttons for 5 seconds until the upper indicator light starts to flash indicating that the remote control is in the programming state.
- Point the remote control towards the appliance. Press and slowly release the **U** button several times, stopping when the appliance goes off (you may need to press the **U** button a few dozen times).
- When the appliance goes off, press the **AV** button to confirm. **Three long flashes** indicate that the operation has been completed successfully.

Additional check

Check that some of the other buttons, corresponding to those on your original remote control, work correctly. If the commands function incorrectly or erratically, you have probably entered a code for a similar but different remote control. In this case, repeat the search procedure starting from **point 3**.

Identify and take note of the code which you have discovered following the code noting procedure (see “PROGRAMMED CODE NOTING” section).

NOTE: The indicator light flashes more quickly during the search operation.

The indicator light stops flashing and the remote control exits the programming mode in the following cases:

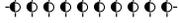 
- if no buttons are pressed for 12 seconds
- if the end of the code search list has been reached. In this case, consult the website www.meliconi.com.

PROGRAMMED CODE NOTING

Remember to always make a note of the 4-digit codes for your appliances on the inside of the battery cover when the code search and saving are finished. The codes will be required if the remote control needs to be re-programmed following accidental deletion.

To find the code for your remote control:

1. Simultaneously hold down the  and  buttons for 5 seconds (if you want to know the codes for the analogue or digital TV), or  and  (if you want to know the code for the decoder), until the indicator light starts to flash indicating that the remote control is in the programming state.
2. Release the buttons and press and release the  button within 8 seconds.
3. After a short pause, the indicator light produces four series of flashes with a space between them, corresponding to the code you are looking for. Count the number of flashes; each series of flashes corresponds to one figure in the code. 10 flashes correspond to 0. For example, the code 1306 corresponds to:

 = 1
 = 3
 = 0
 = 6

4. Make a note of the code on the adhesive label inside the battery cover for quick and easy consultation.

RE-PROGRAMMING YOUR REMOTE CONTROL BY ENTERING THE CODE NOTED DOWN

1. Simultaneously press and hold for 5 seconds the buttons corresponding to the appliance for which you would like to enter the code:  and  for the analogue TV,  and  for the decoder, or  and  for the digital TV, until the indicator light starts to flash indicating that the remote control is in the programming state.
2. Upon release insert the code number you noted beforehand. Three flashes indicate that the code has been memorized correctly. If not, try the code entry procedure again starting from point 1.

TROUBLESHOOTING

PROBLEM

The appliance does not respond and the indicator light does not light up when a button is pressed.

The appliance does not respond but the indicator light lights up.

The appliance does not respond to the commands and the indicator light flashes when a button is pressed.

The remote control is not carrying out all the commands properly.

SOLUTION

Check that the batteries are fitted correctly. If necessary, replace them with 2 new 1.5 V **AAA/LR03** alkaline batteries..

Check that the batteries are new and that the remote control is pointing at the appliance without any obstacles in the way. If necessary, reset the remote control code, repeating the programming procedure.

The batteries are low. Change them.

Perhaps you are using an incorrect code. Reset the remote control by repeating the programming procedure.

INFO LINE

If you have any queries about your new **Speedy 2 COMBO** remote control::

- read this *Instruction Booklet* carefully, which will help you find a solution to most of your problems
- consult our website **www.meliconi.com** where you can quickly and easily find the answers you need.

2-year WARRANTY

The warranty ceases to be valid if the product is tampered with or used incorrectly.

Remote control model **Speedy 2 COMBO**

Purchase date _____

Dealer's stamp