

UNIVERSAL 3-300

Thank you for choosing a MELICONI remote control.


Thanks to its large database and numerous functions the **UNIVERSAL 3-300** remote control is ideal for replacing up to 3 remote controls of any brands for **TV - DVD/CR (Video Recorder) SAT/TER (Digital Terrestrial)**. Its ergonomic form and casing in soft rubber make it easy to grip and protect it against falls and bumps.

Keep this booklet in case you ever need to consult us in the future.

Thanks to the enclosed CD and to the on-line guide on the site www.meliconi.com/guide it is even easier and faster to programme the remote control and discover all the potential offered by the UNIVERSAL 3-300.

USING THE KEYS AND FUNCTIONS

The functions described below are only available if they are already foreseen by your TV.

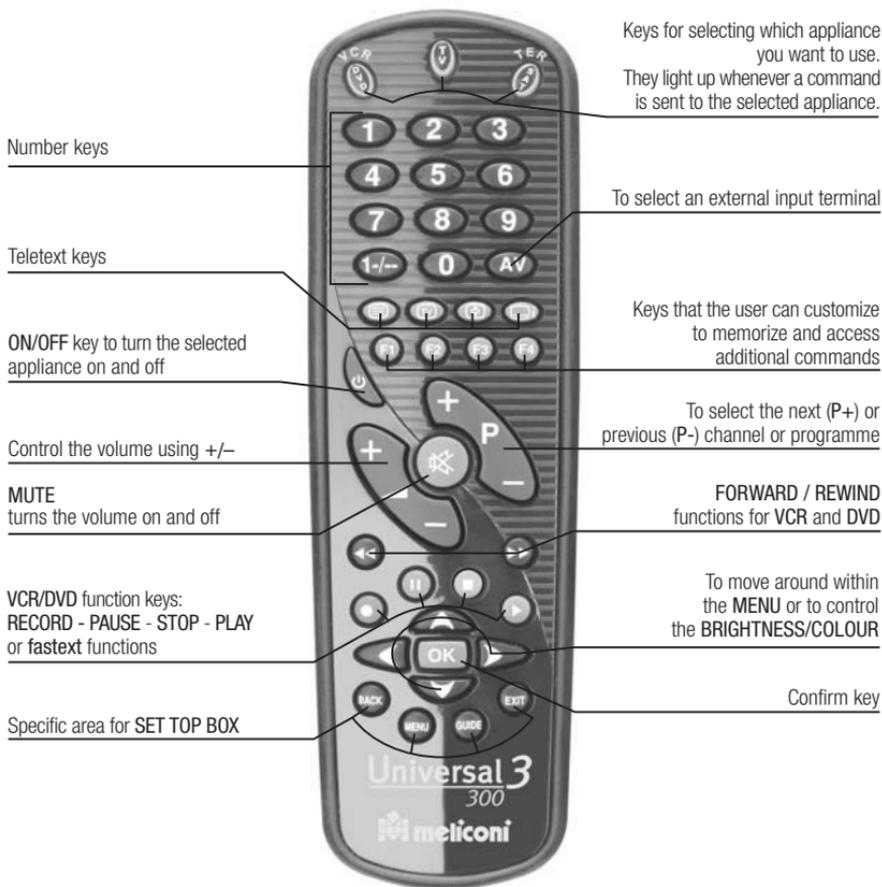

PREPARE FOR USE

Read these instructions carefully before programming your remote control!

FITTING THE BATTERIES

Before programming and using the remote control, fit the batteries.

The remote control requires 2 new **AAA/LR03** batteries. Insert the batteries as shown:

- Change the batteries if the light indicator starts to flash during use. The batteries are low.
- Make a note of the codes for your appliances on the adhesive label inside the battery cover in case you have to reprogramme your remote control.
- This remote control has a permanent memory and does not lose the programmed codes or functions when the batteries are removed.



HOW TO PROGRAMME THE REMOTE CONTROL

The **TV - DVD - SAT** keys can be programmed according to your requirements, following the procedure described below.

The quickest and easiest way to programme the remote control is by consulting enclosed CD or the website www.meliconi.com/guide.

Warning: programme one appliance at a time!

1. Turn on the appliance to be programmed:
 - if a **VCR**, insert a cassette
 - if a **SAT** or **TER** select a programme
 - if a **DVD** insert a DVD.
2. Look in the Code Book for the brand of the appliance to be programmed and make a note of the corresponding code indicated alongside (e.g. **PHILIPS 0025**).
3. Hold down the selection key for the appliance to be programmed for 5 seconds.
4. When the key is released, it will start to flash. Enter the brand code previously identified (e.g. **0025**). The selection key flashes more quickly to indicate that the remote control is ready for the search.
5. Point the remote control at the appliance. Press and slowly release the **ON/OFF** key or **PLAY** for the **VCR** and **DVD** several times, **stopping** when the appliance responds correctly to the command.
6. When the appliance responds correctly, press **OK** to confirm. Three flashes indicate that the search operation has been completed correctly.

PHILIPS

0025



ADDITIONAL CHECK

*Check that some of the other functions used on your original remote control are working correctly. If the commands function incorrectly or erratically, you have probably entered a code for a similar remote control but not the right one. In this case, repeat the search procedure starting from **point 3**, entering the code previously used (e.g. 0025).*

To display and make a note of the code memorized by means of the search, follow the instructions described in the paragraph CURRENT CODE DISPLAY.

N.B. THE LIGHT INDICATOR STOPS FLASHING.

The remote control exits programming mode and the light indicator stops flashing:

- if no keys are pressed for 14 seconds
- if an invalid brand code is entered
- if a key other than **ON/OFF** or **PLAY** is accidentally pressed
- if the end of the code search list has been reached. In this case consult the enclosed CD or the site www.meliconi.com/guide

GLOBAL SEARCH REMOTE CONTROL PROGRAMMING

This operation can take up to 20 minutes and should be carried out if you have not succeeded in programming the remote control by means of the method described above.

The quickest and easiest way to programme the remote control is by consulting enclosed CD or the website www.meliconi.com/guide.

Warning: programme one appliance at a time!

1. Turn on the appliance to be programmed:

- if a **VCR**, insert a cassette
- if a **SAT** or **TER** select a programme
- if a **DVD** insert a DVD.



2. Hold down the selection key for the appliance to be programmed for 5 seconds.

3. When the key is released, it will start to flash. Enter the code **0000**; the selection key flashes more quickly to indicate that the remote control is ready for the search.



4. Point the remote control at the appliance. Press and slowly release the **ON/OFF** key or **PLAY** for the **VCR** and **DVD** several times, **stopping** when the appliance responds correctly to the command.



5. When the appliance responds correctly, press **OK** to confirm. **Three flashes** indicate that the search operation has been completed correctly.



ADDITIONAL CHECK

Check that some of the other functions used on your original remote control are working correctly. If the commands function incorrectly or erratically, you have probably entered a code for a similar remote control but not the right one. In this case, repeat the search procedure starting from **point 2**.

To display and make a note of the code memorized by means of the search, follow the instructions described in the paragraph CURRENT CODE DISPLAY.

N.B. THE LIGHT INDICATOR STOPS FLASHING.


The remote control exits programming mode and the light indicator stops flashing:

- if no keys are pressed for 14 seconds
- if a key other than **ON/OFF** or **PLAY** is accidentally pressed
- if the end of the code search list has been reached. In this case consult the enclosed CD or the internet site www.meliconi.com/guide

CURRENT CODE DISPLAY

To find out the code of your remote control, follow this procedure:

1. Hold down the selection key of the appliance whose code you want to know for 5 seconds.
2. When the key is released it will start to flash; press and release the 1/-- key **within 8 seconds**.
3. After a few seconds, the light indicator communicates the code you are looking for by flashing the four numbers separately. Count the number of flashes; each series of flashes corresponds to one figure in the code. **10 flashes correspond to 0**.
4. Make a note of the code on the adhesive label inside the battery cover for quick and easy future reprogramming.

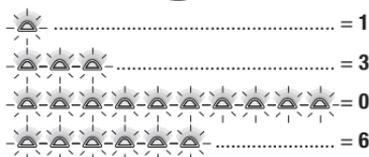

Code obtained = 1306

N.B. this operation cannot be interrupted and the remote control cannot therefore be used until the end of the 4 series of flashes.

ENTERING THE CODE

If you know the exact code with which to programme the remote control, enter it as follows:

1. Hold down the selection key for the appliance to be programmed for 5 seconds.
2. When released, the selected key will start to flash, enter the code (e.g. TV 1100). **Three flashes** indicate that the operation has been completed correctly.



TV FUNCTIONS ALWAYS ACTIVE

The functions **Mute**, **Vol -**, **Vol +** and **AV** are memorized on the keys **F1**, **F2**, **F3**, **F4**. These functions can be used to control appliances other than the TV. For further information consult the enclosed CD or the on-line guide on the site www.meliconi.com/guide.

HOW TO USE THE ADDITIONAL COMMANDS WHICH DO NOT APPEAR ON THE KEYPAD

Although not indicated on the keypad, some keys can be used for additional commands.

Find them on your **UNIVERSAL 3-300** remote control by pressing the keys one by one and discovering the commands that interest you.

In particular, the additional functions most frequently used, such as **NORMALIZATION**, **COLOUR** and **BRIGHTNESS**, can be found on the following keys:

Normalization:		
Brightness (+):		or
Brightness (-):		or
Colour (+):		or
Colour (-):		or

For the functions used less frequently, look for the additional commands on the enclosed CD or the site www.meliconi.com/guide. As well as easily finding the code to programme your remote control, consult the **on-line guide** to help you to find which keys on the **UNIVERSAL 3-300** remote control correspond to the additional commands.

You can memorize the additional commands on the function keys **F1 - F2 - F3 - F4**.

PROBLEM SOLVING

PROBLEM

The appliance does not respond and the TV - DVD - SAT selection keys do not light up when a key is pressed.

The appliance does not respond but the selection keys do light up.

The selection keys flash.

The remote control commands are not all working correctly.

The code for your appliance make is not in the Code Book.

SOLUTION

Try some of the other frequently-used keys. If the problem persists, check that the batteries are fitted correctly. If necessary, replace them with 2 new 1.5 V **AAA/LR03** batteries.

Check that the batteries are new and that the remote control is pointing at the TV without any obstacles in the way. If required, reset the remote control code, following the programming procedure.

The batteries are low. Change them.

You may have used the wrong code. Reset the remote control code, following the programming procedure.

To find the code with which to programme your remote control consult the enclosed CD or **on-line guide** at **www.meliconi.com/guide**.

INFO-LINE

If you have any queries about your UNIVERSAL 3-300 remote control:

- *read this Instruction Booklet carefully - you will find an answer to most of your questions*
- *consult the enclosed CD or our website where you will find the answers you need easily and quickly.*

WARRANTY: 2 years

The warranty ceases to be valid if the product is tampered with or used incorrectly.

Remote control type **GumBody**

Model **UNIVERSAL 3-300**

Purchase date ____ / ____ / ____

Dealer's stamp



The symbol of the crossed trash can shown on the remote control indicates that once the product has reached the end of its working life it should be disposed of separately from other waste. The user should, therefore, take the remote control to a specialised collection centre for electronic and electrical waste, or hand it over to the dealer when purchasing a new similar remote control, on a one to one basis. Correct separated collection for subsequent recycling, processing and environmentally compatible disposal contributes in preventing possible negative effects on the environment and on health and favours the recycling of the materials used in producing the remote control. Improper disposal of the product by the user leads to application of the penalties as per legislative decree no. 22/1997 (article 50 and following of decree no. 22/1997).