

GumBody[®]Light

FACILE Light

Thank you for choosing a MELICONI remote control.


The **FACILE Light** replacement remote control was designed as a TV control. Thanks to its large database and numerous functions it is ideal for replacing any lost, defective or broken remote control.

Its ergonomic form and casing in soft rubber make it easy to grip and protect it against falls and bumps. The large pushbuttons are easy to see and to use. And thanks to the **LIGHT** button the keys light up so you can use the remote control even in the dark.

Keep your Instruction Booklet and Code Booklet for future reference. For anyone with internet, via the website www.gumbodylight.com, it is even easier and quicker to programme the remote control and discover all the potential of the FACILE Light thanks to the on-line guide.

USING THE KEYS AND FUNCTIONS

The functions described below are only available if they are already foreseen by your TV.

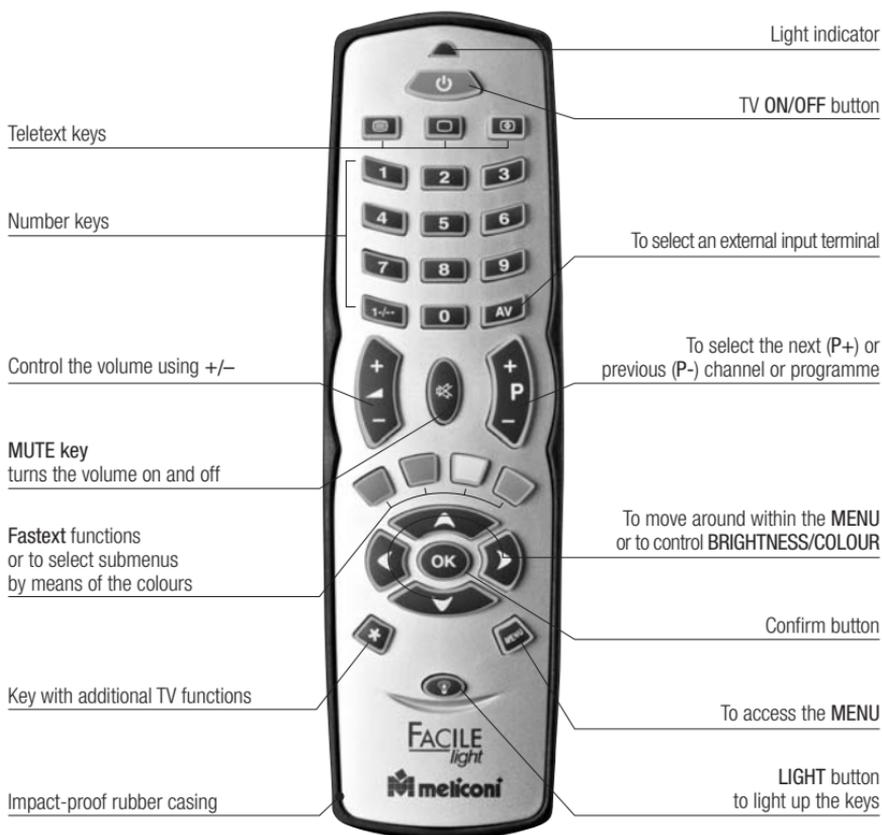

SET-UP

Read these instructions carefully before programming your remote control!

FITTING THE BATTERIES

Before programming and using the remote control, fit the batteries.

The remote control requires 2 new **AA/LR06** batteries. Insert the batteries as shown:

- Remember to replace the batteries once a year.
- If the light indicator starts to flash while using the remote control, replace the batteries. The batteries are low.
- When you remove the batteries, fit the new ones within 5 minutes or you may have to reprogramme your remote control.
- Make a note of the code for your TV on the adhesive label inside the battery cover in case you have to reprogramme your remote control.



To programme the FACILE Light remote control, follow the indications in paragraph A, B or C.

A

BRAND SEARCH PROGRAMMING MODE

The quickest and easiest way to programme the remote control is by consulting the website www.gumbodilight.com.

1. Switch on the TV.
2. Look for the brand of your TV in the code book and make a note of the code indicated alongside (e.g. **PHILIPS 0025**) or the code for the brand indicated by the arrow.
3. Hold down the **MUTE** and **ON/OFF** buttons together for 5 seconds until the light indicator at the top starts to flash indicating that the remote control is being programmed.
4. Release the buttons and enter the brand code previously identified (e.g. **0025**) within 12 seconds. The light indicator flashes more quickly to indicate that the remote control is ready for the search.
5. Point the remote control at the TV. Press and slowly release the **ON/OFF** key several times, **stopping** when the TV goes off.
6. When the TV goes off, press the **OK** key to confirm. **Three flashes** indicate that the operation has been completed correctly.

PHILIPS 0025

PHONOLA → PHILIPS



0 + 0 + 2 + 5



ADDITIONAL CHECK

Check that some of the other keys, corresponding to those on your original remote control, work correctly. If the commands function incorrectly or erratically, you have probably entered a code for a similar remote control but not the right one. In this case, repeat the search procedure starting from **point 3**, entering the code previously used (e.g. 0025).

To display and make a note of the code memorized by means of the search, follow the instructions described in the paragraph **CURRENT CODE DISPLAY**.

N.B. THE LIGHT INDICATOR STOPS FLASHING

The remote control exits programming mode and the light indicator stops flashing:

- if no keys are pressed for 14 seconds
- if an invalid brand code is entered
- if the end of the code search list has been reached. In this case, switch to programming mode **C**.

B

DIRECT CODE ENTRY

The quickest and easiest way to programme the remote control is by consulting the website www.gumbodyleft.com.

1. Switch on the TV.
2. Look for the brand of your TV in the code book and make a note of the **first code** in the list (e.g. Philips 1000).

PHILIPS				0025	
TV	1000	1006	1007	1008	
	1009	1010	1011	1012	1013
	1014	1015	1016	1017	1018

3. Hold down the **MUTE** and **ON/OFF** buttons together for 5 seconds until the light indicator at the top starts to flash indicating that the remote control is being programmed.



4. Release the buttons and enter the 4-digit brand code previously identified (e.g. 1000) within 12 seconds. **Three flashes** indicate that the code has been memorized correctly. If not, try the code entry procedure again, starting from **point 3**.



ADDITIONAL CHECK

Point the remote control at the TV. Check that the TV responds correctly to the commands given. If there is no response or the TV only responds partially or incorrectly, it is probable that you have used the wrong code. In this case, repeat the procedure starting from point 3. This time, however, use the **NEXT CODE** in the list (e.g. 1006).

Remember to make a note of the TV code used to programme the remote control on the adhesive label inside the battery cover for quick and easy reprogramming.

N.B. THE LIGHT INDICATOR STOPS FLASHING

The remote control exits programming mode and the light indicator stops flashing:

- if no keys are pressed for 14 seconds
- if an invalid code is entered

This operation can take up to 20 minutes and should be carried out if you have not succeeded in programming the remote control by means of the other methods. The quickest and easiest way to programme the remote control is by consulting the website www.gumbodlight.com.

1. Switch on the TV.
2. Hold down the **MUTE** and **ON/OFF** buttons together for 5 seconds until the light indicator at the top starts to flash indicating that the remote control is being programmed.
3. Release the keys and enter the code **0000** within 12 seconds. The light indicator flashes more quickly to indicate that the remote control is ready for the search.
4. Point the remote control at the TV. Press and slowly release the **ON/OFF** key several times, **stopping** when the TV goes off.
5. When the TV goes off, press the **OK** key to confirm. **Three flashes** indicate that the operation has been completed correctly.



ADDITIONAL CHECK

*Check that some of the other keys, corresponding to those on your original remote control, work correctly. If the commands function incorrectly or erratically, you have probably entered a code for a similar remote control but not the right one. In this case, repeat the search procedure starting from **point 2**.*

*To display and make a note of the code memorized by means of the search, follow the instructions described in the paragraph **CURRENT CODE DISPLAY**.*

N.B. THE LIGHT INDICATOR STOPS FLASHING

The remote control exits programming mode and the light indicator stops flashing:

- if no keys are pressed for 14 seconds
- if the end of the code search list has been reached. In this case, consult our website www.gumbodlight.com

CURRENT CODE DISPLAY

To find out the code of your remote control, follow this procedure:

1. Hold down the **MUTE** and **ON/OFF** keys together for 5 seconds until the light indicator at the top starts to flash.



2. Release the **MUTE** and **ON/OFF** keys and press and release the **1/--** key within 8 seconds.



3. After a few seconds, the light indicator produces 4 series of flashes, with a pause between each series, corresponding to the current code. Count the number of flashes; each series of flashes corresponds to one figure in the code. **10 flashes correspond to 0.**



Code obtained = **1306**

4. Make a note of the code on the adhesive label inside the battery cover for quick and easy future reprogramming.

N.B. this operation cannot be interrupted and the remote control cannot therefore be used until the end of the 4 series of flashes.

LIGHT FUNCTION: Lights up the keys on the remote control

Press the **LIGHT** button to light up the remote control keys. This is very useful in the dark to find which key to press.

The light goes out when the **LIGHT** button is pressed again or after about **10 seconds** if no keys are pressed.

HOW TO USE THE ADDITIONAL COMMANDS WHICH DO NOT APPEAR ON THE KEYPAD

Although not indicated on the keypad, some keys can be used for additional commands.

Find them on your **FACILE Light** remote control by pressing the buttons one by one and discovering the commands that interest you.

In particular, the additional functions most frequently used, such as **NORMALIZATION**, **COLOUR** and **BRIGHTNESS**, can be found on the following keys:

- Normalization:
- Brightness (+): or
- Brightness (-): or
- Colour (+): or
- Colour (-): or

For less frequently used functions look for the additional commands on our website www.gumbodilight.com. As well as easily finding the code to programme your remote control, the **on-line guide** will help you to find which keys on the **FACILE Light** remote control correspond to the additional commands.

PROBLEM SOLVING

PROBLEM

The TV does not respond and the light indicator does not light up when a key is pressed.

The TV does not respond but the light indicator does light up.

The light indicator flashes when a key is held down but the TV does not respond.

The remote control commands are not all working correctly.

The code for your TV brand is not in the Code Book.

SOLUTION

Try some of the other frequently-used buttons. If the problem persists, check that the batteries are fitted correctly. If necessary, replace them with 2 new 1.5 V **AA/LR06** batteries.

Check that the batteries are new and that the remote control is pointing at the TV without any obstacles in the way. If necessary, re-enter the remote control code, following the programming procedure **A** or **B** or **C**.

The batteries are low. Change them.

You may have used the wrong code. Re-enter the remote control code, following the programming procedure **A** or **B** or **C**.

Programme the remote control following the global search procedure **C** or consult the **on-line guide** on the website **www.gumbodyleft.com** to find the code with which to programme your remote control.

INFO-LINE

If you have any queries about your FACILE Light remote control:

- read this Instruction Booklet carefully - you will find an answer to most of your questions
- consult our website **www.gumbodyleft.com** where you will find the answers you need easily and quickly.

WARRANTY: 2 years

The warranty ceases to be valid if the product is tampered with or used incorrectly.

Type of remote control **GumBody Light**
Model **FACILE Light**

Purchase date / /

Dealer's stamp



The symbol of the crossed trash can shown on the remote control indicates that once the product has reached the end of its working life it should be disposed of separately from other waste. The user should, therefore, take the remote control to a specialised collection centre for electronic and electrical waste, or hand it over to the dealer when purchasing a new similar remote control, on a one to one basis. Correct separated collection for subsequent recycling, processing and environmentally compatible disposal contributes in preventing possible negative effects on the environment and on health and favours the recycling of the materials used in producing the remote control. Improper disposal of the product by the user leads to application of the penalties as per legislative decree no. 22/1997 (article 50 and following of decree no. 22/1997).